



Select Series PDU with RackLink™ Quick Start Guide

I-00785 Rev G

 
- Remotely reboot connected equipment.
- Integrated sequencing.
- Set email alerts.
- Access software downloads, firmware updates, and the Select Series PDU with RackLink User Manual at www.legrandav.com.



Supplied Components and Hardware (Continued)


RACKMOUNT MODELS

NOTE: Rackmount models refer to RLNK-915R, RLNK-920R, and RLNK-910R-IEC-NS, products.

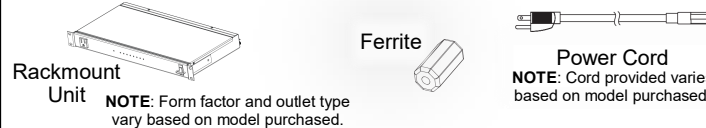


HALF-RACK MODELS

 NOTE: Half-Rack models refer to RLNK-415R, RLNK-420R, RLNK-410R-IEC-NS products.

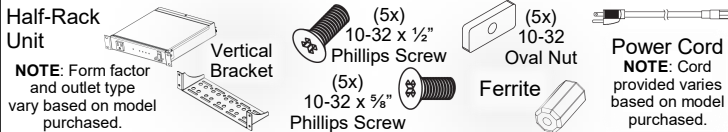

VERTICAL MODELS

 NOTE: Vertical models refer to RLNK-1015V and RLNK-1615V products.

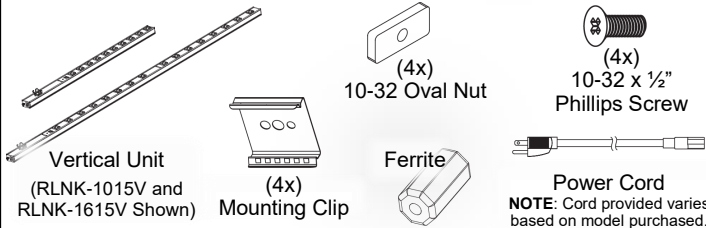

NOTE:

- To order more hardware, contact support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901.
- Additional hardware is included that may not be required for your installation.

Required Tools

- #2 Phillips Screwdriver
- #2 Flat Head Screwdriver

WARNING

Use tools with caution and follow all safety protocols.

AVERTISSEMENT

Utiliser des outils avec prudence et suivre tous les protocoles de sécurité.

IMPORTANT SAFETY INSTRUCTIONS—EN

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation and maintenance of the power distribution unit (PDU).

For complete safety instructions, refer to the Select Series PDU with RackLink™ User Manual (I-000768) at www.legrandav.com.

- Only use attachments and accessories specified by the manufacturer.
- Read all instructions before using the product.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ—FR

CONSERVER CES INSTRUCTIONS - Ce manuel contient des instructions importantes qui doivent être suivies lors de l'installation et de la maintenance de l'unité de distribution d'énergie (PDU).

Pour obtenir des instructions de sécurité complètes, reportez-vous au manuel d'utilisation Select Series PDU with RackLink™ User Manual (I-000768) à www.legrandav.com.

 
- Utiliser uniquement les accessoires spécifiés par le fabricant.
- Lisez toutes les instructions avant d'utiliser le produit.

Supplied Components and Hardware

After carefully opening all product packaging, identify the supplied components and hardware shown. If pieces are missing or damaged, please report it immediately to Technical Support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901. Keep the original packaging in a safe place for future use.

COMPACT MODELS


NOTE: Compact models refer to RLNK-215 and RLNK-210-IEC-NS products.

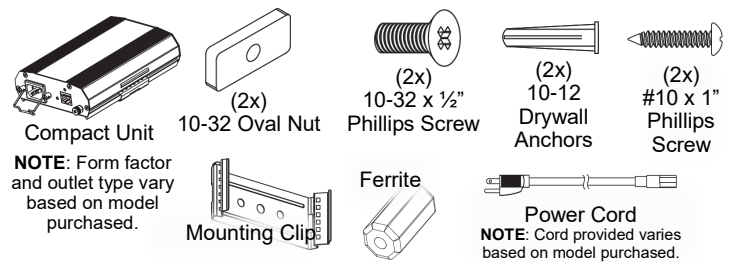

- 2 -

Setting Up Your RackLink Device

 1. Install the device in a permanent location considering ease of access and adequate power requirements.
2. Plug power cord into device and a properly grounded AC power source.
3. Use a shielded Cat5e cable (or better, not provided) to connect the device to your network.
4. Attach the ferrite provided (Part No. 600-01660) as close as possible to the connector going into your device on your shielded Cat 5 cable. **(FIGURE A)**


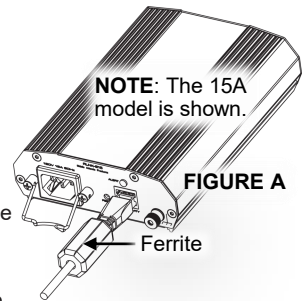


NOTE: The remainder of this topic applies to vertical (RLNK-1015V and RLNK-1615V) and the compact (RLNK-2XX) models only.

Installing Vertical (RLNK-1015V and RLNK-1615V) Models in an Enclosure

1. Install the mounting clips through the slot opening or fixed hole locations on rackrail brackets as shown. **(FIGURE B)**
2. Insert PDU into the clips by gently tapping with the palm of your hand.

  
TIP: Remove the PDU from the mounting clip by wedging a flat head screwdriver between the side of the PDU and clip, and gently prying the PDU from the clip as shown.

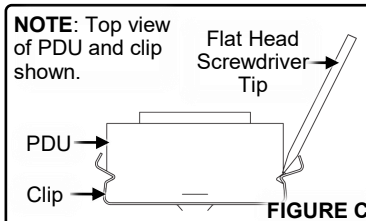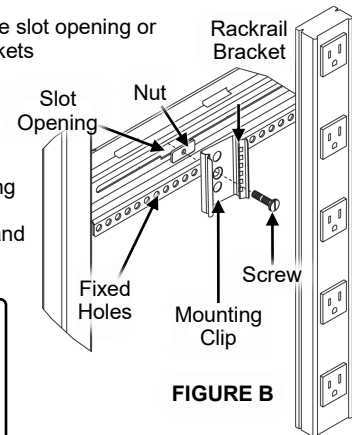

Setting Up Your RackLink Device (Continued)

Installing the Compact (RLNK-2XX) Model in an Enclosure

 1. Install mounting clip into the desired location using the outer two provided mounting holes. (FIGURE D)
2. Insert the RLNK-2XX into the mounting clip.

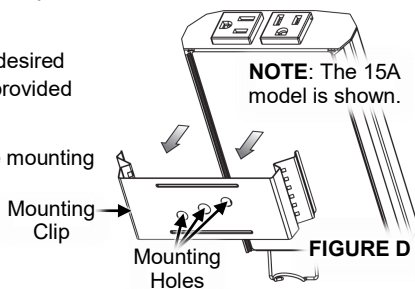

Default Network Settings for Ethernet Port

An IP address is automatically assigned via DHCP by default.

NOTE: If the system is unable to acquire an IP address from the DHCP server, the system automatically assigns 192.168.1.200.

Installing the RackLink Discovery Tool Software

1. If you haven't done so already, download the Discovery Tool onto your workstation from the Power Downloads page at:

<https://www.legrandav.com/resources/power-downloads>

2. Install the application on your workstation. For more information about installing the Device Discovery tool, refer to the Select Series PDU with RackLink User Manual (I-00768) at www.legrandav.com.

If you have questions, please contact support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901.

- 5 -

Understanding Alert LED States

An LED labeled ALERT on your PDU indicates various states. This table explains how to interpret the LED states.

Alert LED State	What it Means
Blinking Green	Acquiring IP address (during startup).
Green	Normal operation, IP acquired, and no alarms.
Blinking Green/Red	No alarms, running on default IP (DHCP not acquired).
Blinking Red	Lost IP connection.
Red	Network is active, alarms present.

Updating RackLink Device Firmware

NOTE:

- Middle Atlantic recommends updating your device to the latest firmware version. The following procedure quickly explains how to update your firmware. For a more detailed version of this procedure, refer to the Select Series PDU with RackLink User Manual (I-00768) at www.legrandav.com. If you have questions, please contact support at av.support@legrand.com or (866) 977-3901.
 - The currently installed firmware version is displayed at the bottom of every page of the user interface.
1. If you haven't done so already, download the latest version of the RackLink device firmware onto your workstation from the Power Downloads page at:

<https://www.legrandav.com/resources/power-downloads>

NOTE: If you have any issues downloading the correct firmware for your RackLink device, please contact support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901.

2. Sign in to the web interface using the admin account.
3. Click **Menu > Firmware**.
4. Click **Choose File** and locate the latest version of the firmware from Step 1.
5. Click **Upload**.
The screen indicates that it's uploading the firmware file and eventually shows a completed status.
6. Click **Restart Unit**.
The Upload Reminder pop-up appears.
7. Click **Restart**.
At this point, the unit will restart, install the new firmware, and return to the main page.

- 7 -

Initial Network Configuration via Device Discovery

1. After launching your RackLink Device Discovery program, the tool automatically discovers all PDUs on the subnet to which you are connected.

NOTE:

- Use the Discover button to refresh the screen and discover any newly connected PDUs.
- By default, the PDU is set for DHCP. You can identify each device by the MAC address or IP address.
- You may need to disable your Windows firewall to discover your PDU. Contact your network administrator for assistance.

2. Click Device Control to access the default web interface for a specific device.

Default Web Interface Account Information

- Default administrator account credentials:
Username: **admin**
Password: **admin**
- Default user account credentials:
Username: **user**
Password: **user**
- Default control system account credentials:
Username: **user**
Password: **password**

After logging in for the first time, the system forces you to change default passwords for security purposes.

NOTE: Log in for the first time using the administrator account in order to change the passwords for all of the accounts.

For more information about using the web interface, refer to the Select Series PDU with RackLink User Manual (I-00768) at www.legrandav.com. If you have questions, please contact support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901.

- 6 -

Troubleshooting

Forgotten Password

Press the Restore Defaults button on the device. This will default the login to admin and forces a default password change for security purposes.

NOTE: Pressing this button also defaults the device to using DHCP.

Cannot Access User Interface

Check to see if you can access a standard webpage, such as www.google.com.

Verify the green LED on your Ethernet port is lit (not flashing) and the yellow LED is flashing.

Unit Will Not Operate After Firmware Upgrade

Contact support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901.

RackLink Not Receiving Power

Check that your power cable is securely fastened and confirm the circuit breaker on the unit is in the ON position.

Plug another device into the same receptacle and see if the other unit receives power.

WARRANTY

For warranty information, refer to www.legrandav.com/policies/warranty_information.

Contacting Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | www.legrandav.com | av.middleatlantic.techsupport@legrand.com

Contacting Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | www.legrandav.com | av.canada.customerservice@legrand.com

Contacting Middle Atlantic Europe, Middle East, and Africa (EMEA) Technical Support

P: +31 495-726-003 | av.emea.middleatlantic.support@legrand.com

United States (US)

Legrand | AV Headquarters
6436 City West Parkway
Eden Prairie, MN, 55344, USA

European Union (EU)

Legrand AV Netherlands
B.V. Franklinstraat 14 6003
DK, Weert, Netherlands

United Kingdom (UK)

Starline Holding Technology Ltd.
(Authorized Representative)
Unit C, Island Rd.
Reading RG2, ORP- UK

At Legrand AV Inc. we are always listening. Your comments are welcome. Legrand AV is an ISO 9001 and ISO 14001 Registered Company.

- 8 -